
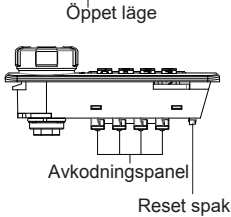


Hur man använder låset

■ Den fabriksinställda kombinationen är 0-0-0-0, även om siffrorna kan visa andra nummer.

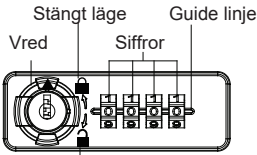



5 TH x PDN5 .

Vrid på siffrorna och placera öppningskombinationsnumren med "Guide linjen".

Vrid vredet till öppet läge.

5 TH Lt G5 :

Vrid vredet till stängt läge.

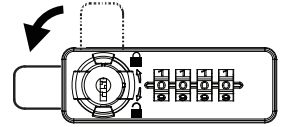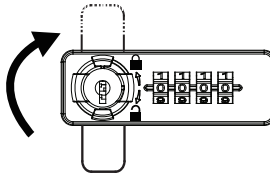

■ Beroende på olika skåp, kan du behöva vrida "Vredet" 90° eller 180° för att använda ditt lås.

Så här återställer du din kombination

■ Den fabriksinställda kombinationen är 0-0-0-0, även om siffrorna kan visa andra nummer.

1. Ställ siffrorna vid förinställd kombination 0-0-0-0. (Fig. A)
2. Vrid vredet till öppet läge. (Fig. B)
3. Skjut Reset spaken på baksidan av låset från position "A" till "B". (Fig. C) Ange önskad kombination.
4. Återställ Reset spaken tillbaka till position "A". (Fig. D) Ditt lås är nu klart att öppnas med den nya kombinationen.




Fig. A




Fig. B




Fig. C




Fig. D

Hur man avkodar en glömd kombination

1. Sätt i rätt huvudnyckel. Vrid huvudnyckeln medurs för att öppna dörren.
2. Se till att du vrider huvudnyckeln moturs och ta sedan bort huvudnyckeln från låset. (Fig. F)



OBS: Ta INTE bort nyckeln vid tillfället. (Fig. E)



Fig. E

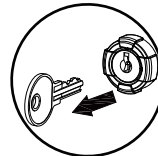


Fig. F

3. Tryck ned avkodningspanelen, håll den kvar och rotera siffran tills avkodningspanelen sjunker eller det hörs ett "klick" ljud. (Fig. G). Upprepa samma process för alla siffror, detta är då öppningskombinationen.


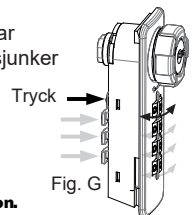


Fig. G

■ Huvudnyckeln kan användas när som helst för att öppna ett lås i en nödsituation.
 ■ Håll alltid din hemliga kombination på en säker och tillgänglig plats för framtida användning.

How to operate your lock


■ The factory preset combination is 0-0-0-0, even though the dials may appear in other numbers.

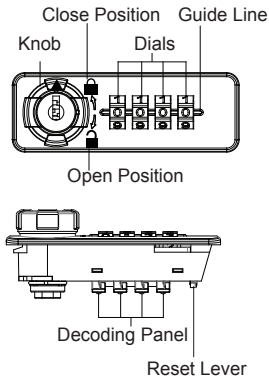

TO OPEN:


Turn the dials and align the opening combination numbers with the Guide Line.

Turn the knob to the open position.

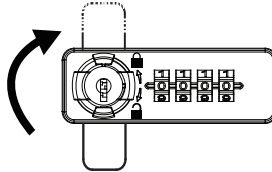

TO LOCK:

Turn the knob to the close position.

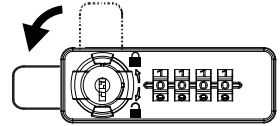

■ Due to various cabinets, you may need to turn the "Knob" 90° or 180° to operate your lock.

How to reset your combination

■ The factory preset combination is 0-0-0-0, even though the dials may appear in other numbers.

1. Leave the dials at preset combination 0-0-0-0. (Fig. A)
2. Turn the Knob to the open position. (Fig. B)
3. Push the Reset Lever on the back of lock from "A" to "B" position. (Fig. C) Set your own desired combination.
4. Return the Reset Lever back to "A" position. (Fig. D) Your lock is now ready to open at its new combination.




Fig. A




Fig. B

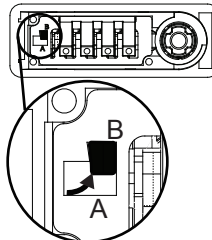


Fig. C

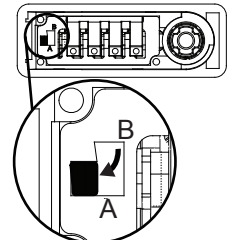


Fig. D

How to decode the forgot combination

1. Insert the correct Master Key. Turn the Master Key clockwise to open the door.
2. Make sure to turn the Master Key counterclockwise back and then remove the Master Key from the lock. (Fig. F)



NOTE: Do NOT remove the key at the moment. (Fig. E)



Fig. E

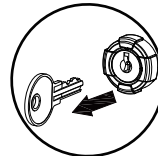


Fig. F

3. Press down the Decoding Panel, keep holding it and rotate the dial till the Decoding Panel sinks or there is a "click" sound. (Fig. G). Repeat the same process for all dials, you will get the opening numbers.

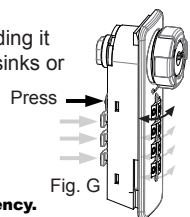


Fig. G

■ The Master Key operation may be used at any time to open a lock in an emergency.
 ■ Always keep your secret combination in a safe and accessible place for future reference.